



American Weigh Scales

AWS-Series User Manual



AWS-70 (70x0.01g)
AWS-100 (100x0.01g)
AWS-250 (250x0.1g)
AWS-600 (600x0.1g)
AWS-1KG (1000gx0.1g)



AWS-Series


Thank you for purchasing the American Weigh AWS-Series digital pocket scale. Please read all operating instructions carefully before use. Scales are precision measuring devices and should always be handled with proper care. To ensure years of reliable service, keep these simple tips in mind:

- Do not exceed the scale's maximum capacity. Overloading your scale can permanently damage it!
- Avoid exposure to extreme heat or cold. Scales perform best at normal room temperature. If temperatures have changed dramatically, calibration and adjustment may be necessary.
- Allow your scale to warm up for 30-60 seconds before performing calibration and adjustment(if available).
- Store your scale in a clean, dry location. Dust, dirt, and moisture can accumulate on the weighing sensors and electronics causing inaccuracy or malfunction.
- Avoid using your scale in close proximity to strong radio wave emitting devices such as computers, cash registers, and cordless phones.
- Always weigh on a flat and level surface, free from vibrations and drafts. The corner of a room is usually the most stable.
- Gently apply all items to be weighed. Do not drop items onto the weighing platform.
- Avoid dropping your scale. The warranty does not cover damage due to rough treatment or overload.
- Check the batteries first if you are having any trouble with your scale. This simple step can remedy most scale issues.
- Do not disassemble your scale. This product contains no user serviceable parts.

I. Part List


1. Scale
2. Cover/Expansion Tray
3. AAA Batteries (x2)

II. Key Description

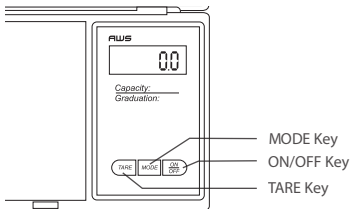

III. Battery Installation

1. Before using the scale for the first time, check the battery compartment and remove any plastic insulation strips or packaging that may be in place to prevent battery drainage during shipping/storage.
2. If you are replacing the batteries, make sure the positive and negative contacts are properly aligned.

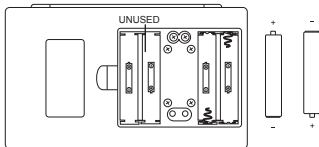

IV. Operation

1. Place the scale on a flat, level surface and press the **ON/OFF** key to turn the scale on.
2. Once the start-up process completes and the scale goes to zero you are ready to weigh.
3. Place the quantity to be weighed onto the weighing platform.
4. Wait a couple seconds for the display to stabilize before taking a weight reading.

V. Changing the Unit of Measure

1. Press the **MODE** key to change the scales displayed unit of measure.
2. If the scale is turned off then back on, it will default to the last unit used.
 - **AWS-70 Units:** g (gram) ▶ oz (ounce) ▶ ct (carat) ▶ gn (grain)
 - **AWS-100 Units:** g (gram) ▶ oz (ounce) ▶ ct (carat) ▶ gn (grain)
 - **AWS-250 Units:** g (gram) ▶ oz (ounce) ▶ ozt (troy ounce) ▶ dwt (pennyweight)
 - **AWS-600 Units:** g (gram) ▶ oz (ounce) ▶ ozt (troy ounce) ▶ dwt (pennyweight)
 - **AWS-1KG Units:** g (gram) ▶ oz (ounce) ▶ ozt (troy ounce) ▶ dwt (pennyweight)

VI. Using the Tare Feature

You can use this scale's tare feature to subtract the weight of an empty container or vessel for net weight determination. **NOTE:** The weight of the container will subtract from the available capacity.

1. Place the empty container or vessel on the weighing platform.
2. Press the **TARE** key once. The display will then reset to zero. If the container is removed, it's weight will be displayed as a negative number.
3. You may now fill the container with the quantity to be weighed. The display will show the net weight of the contents.
4. To return to normal weight display (gross weight), remove any items from the weighing platform and press the **TARE** key again to re-zero the scale.

VII. Calibration

Calibration and adjustment are performed at the factory. However, the weighing range can shift slightly during shipping. Also, due to changes in local acceleration of gravity around the world, adjustment is recommended when moving the scale from one location to another. To check calibration:

1. Place the required calibration weight on the scale and note the displayed value.
2. If the displayed value is not within acceptable tolerance (see chart below), adjustment is required.

Model	Acceptable Tolerance (\pm)	Calibration Weight	Recommended Accuracy Class
AMW-70	0.02g	50g	OIML M2
AMW-100	0.02g	100g	OIML M2
AMW-250	0.2g	200g	OIML M2
AMW-600	0.2g	500g	OIML M2
AMW-1KG	0.2g	500g	OIML M2

VIII. Adjustment

1. Turn the scale on by pressing the ON/OFF key.
2. Wait for the display to show "0.0g" or "0.00g" then press and hold the MODE key until the display shows "CAL", then release.
3. Press the MODE key again. The display will flash "CAL" followed by the required calibration weight.
4. Place the required calibration weight on the center of the platform. The display will show "PASS" then return to normal weighing mode. Calibration is complete! You may now turn the scale off.

IX. Troubleshooting

- **Problem:** Scale will not turn on
- **Solution:** Check the batteries

- **Problem:** Displayed weight fluctuates randomly
- **Solution:** Make sure your workspace is stable and free of any air currents or vibration

- **Problem:** Displayed weight is inaccurate
- **Solution:** Perform a calibration adjustment

X. Error Codes

1. **OUTZ** - Zero range has shifted. Perform calibration adjustment. If the problem persists, the load cell may be permanently damaged due to overloading.
2. **88888** - Maximum capacity exceeded. Remove the extra weight to avoid damaging the load cell.
3. **L** - Batteries are low. Replace the batteries.

XI. Specifications

	AWS-70	AWS-100
Max. Capacity	70g	100g
Readability	0.01g	0.01g
Power	Two (2) AAA Batteries	
Dimensions	3.0 x 5.0 x 0.8 in.	
Platform Dimensions	2.5 x 3.0 in.	
Warranty	10 Year Limited Warranty	

	AWS-600	AWS-250	AWS-1KG
Max. Capacity	600g	250g	1000g
Readability	0.1g	0.1g	0.1g
Power	Two (2) AAA Batteries		
Dimensions	3.0 x 5.0 x 0.8 in.		
Platform Dimensions	2.5 x 3.0 in.		
Warranty	10 Year Limited Warranty		

XII. Capacity/Readability Charts

AWS-70	AWS-100
70x0.01g	100x0.01g
2.47x0.001oz	3.528x0.001oz
350x0.05ct	500x0.05ct
1080.2x0.2gn	1543x0.2gn

AWS-250	AWS-600	AWS-1KG
250x0.1g	600x0.1g	1000x0.1g
8.818x0.01oz	21.16x0.01oz	35.27x0.01oz
8.038x0.01ozt	19.29x0.01ozt	32.15x0.01ozt
160.8x0.1dwt	385x0.1dwt	643.1x0.1dwt

DISTRIBUTED BY

JB Prince Company, Inc.

ADDRESS 36 East, 31st Street., 11th Floor, New York, NY 10016

LOCAL (212) 683 - 3553

TOLL FREE (800) 473 - 0577

FAX (212) 683 - 4488

EMAIL customerservice@jbprince.com

WEBSITE jbprince.com